


INSTALLATION INSTRUCTIONS


IP Solid Bulkhead Adapter

Step 1: Make sure you have all the contents of IP Solid Bulkhead Adapter kit. Open the terminal to access the panel from both inside and outside.

Step 2: The gasket is positioned between the flange of IP Solid bulkhead adapter and the enclosure so that the enclosure can be ingress protected from the outside. Slide the weather sealing gasket (face seal) onto the bulkhead adapter.

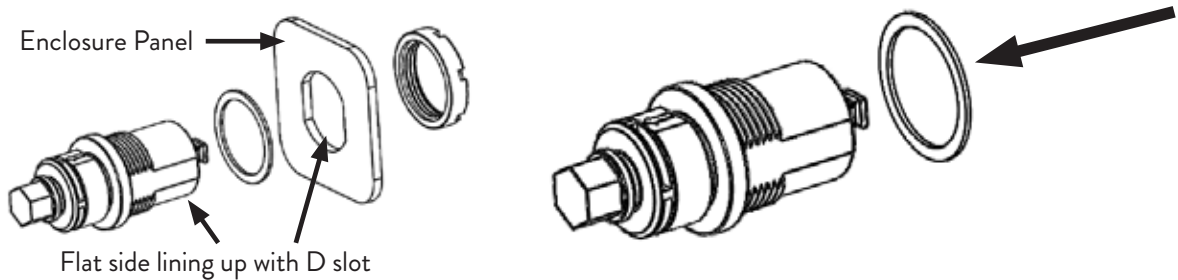

Step 3: From the interior of the enclosure hand screw the Panel Nut onto the adapter. Make sure not to cross thread the panel nut.

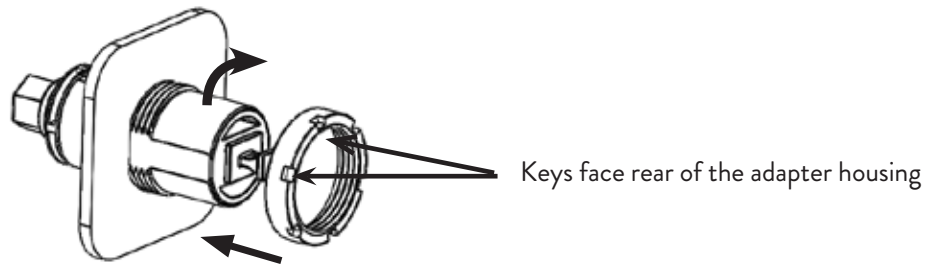

Step 4: Make sure to align the keys in the **Panel Nut Tool** with the notches in the panel nut. And torque the panel nut to 10 in/lbs. Check to make sure that the nut is not overtightened and that the sealing gasket on the outside is not deformed by over tightening. The gasket should be intact and in proper round shape providing a good seal so there is no ingress from outside of the terminal to inside the terminal.

